


# CANOFIX® Installation Guide

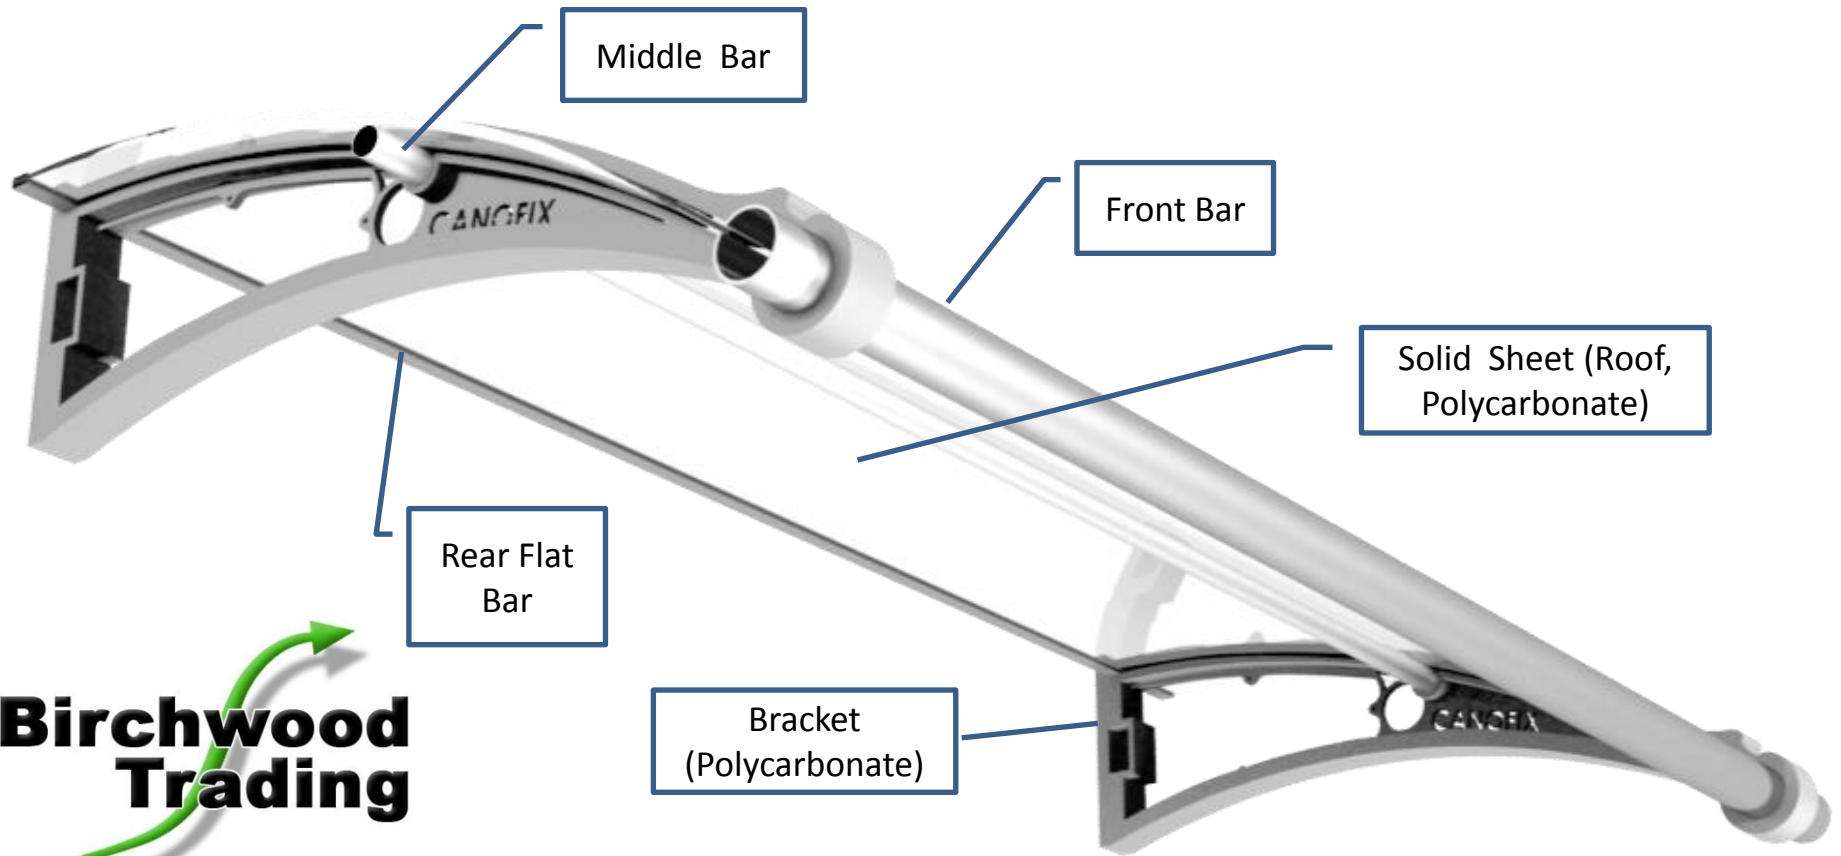

**Birchwood  
Trading**

Marketing Results Ltd  
3 Ravenhurst Court, Birchwood,  
Warrington, Cheshire, WA3 6PN  
[www.birchwoodtrading.co.uk](http://www.birchwoodtrading.co.uk)

t. 01925 826314


f. 01925 852944

e. [enquiries@birchwoodtrading.co.uk](mailto:enquiries@birchwoodtrading.co.uk)

# CANOFIX BRACKET TYPE & SIZE (Depth x Width unit: mm)

## PC550

150x505 (DepthxWidth unit: mm)

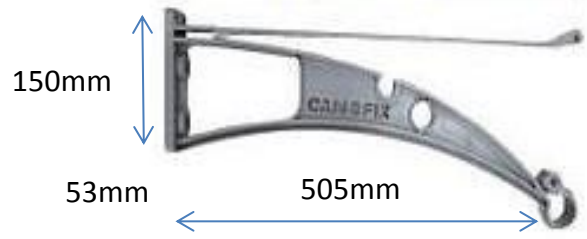


## PC1000

260x965 (DepthxWidth unit: mm)



## PC650

180x630 (DepthxWidth unit: mm)

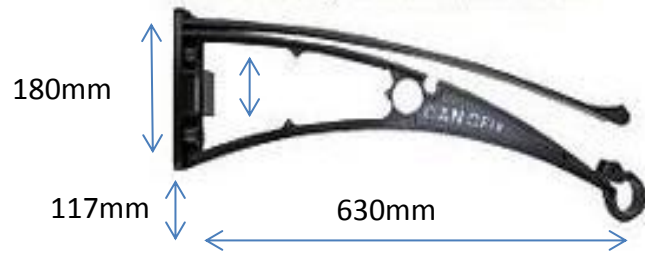

## PC1270

260x1225 (DepthxWidth unit: mm)



## PC1500

280x1500 (DepthxWidth unit: mm)



# 1. Deciding the location of the brackets on the wall

---




1. Position the aluminum back plate, with the notched area, through the front of the bracket, making sure that it's pushed all the way to the back until it's hard up against the bracket.
2. Transfer each hole centre onto the wall and mark the bracket positions.
3. Fix the brackets to the wall with the fixings provided



## 2. Fitting and Assembling

---

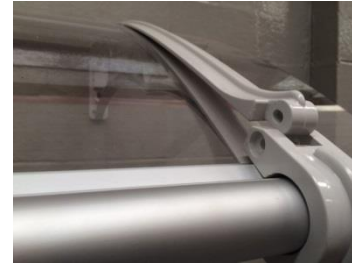

1. Position the aluminum back plate, with the notched area, through the front of the bracket, making sure that it's pushed all the way to the back until it's hard up against your wall.
2. Insert the middle support bar(s) and front bar through each bracket.
3. Insert the polycarbonate sheet into the brackets from the front, again ensuring that this inserts in the back plate. You should then carefully insert into the front bar, securing it in place.
4. Secure each bracket with the stainless steel hexagon nut and bolt supplied.
5. Putting in place the PVC gasket strips at the edge of polycarbonate sheet end trims and support tube end caps.
6. To finish off, screw the bracket top from the top of the middle bar, through the bracket top, sheet and middle bar altogether tightly using supplied self-screws, especially at the edge two brackets each not to rattle.

**Birchwood  
Trading**

